


HNC PLC User Manual

HC Series Card-type PLC

Analog Module User Manual & Application Cases

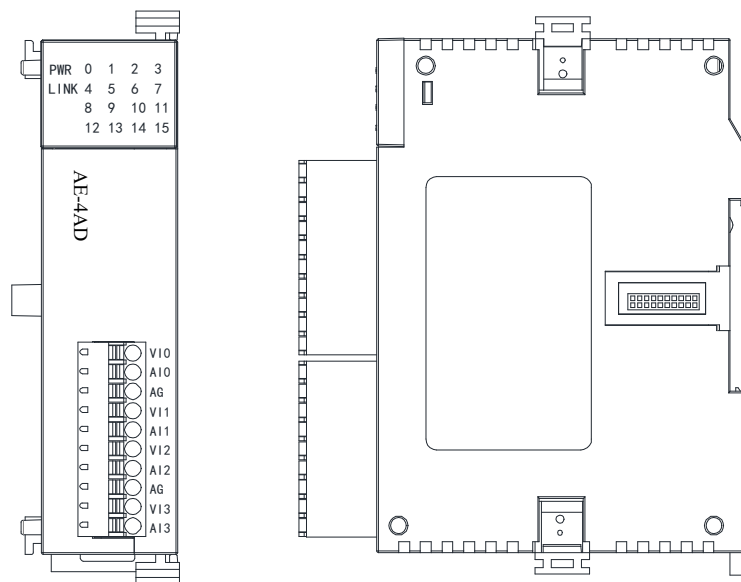

Contents

Analog Module User Manual

1. Product Model List and Dimension.....	3
2. Indicator Description.....	3
3. Power Supply Specification.....	4
4. Environmental Specifications for Product.....	4
5. Analog Input (AI) Specification.....	4
6. Analog Output (AQ) Specification.....	4
7. Analog Input (AI) Wiring Diagram.....	5
8. Analog Output (AQ) Wiring Diagram.....	5
9. Terminal Diagram.....	5
10. Module Parameter Table.....	5
4-channel analog module parameter table.....	5
8-channel analog module parameter table.....	6
11. Mounting and installation.....	8


Analog Module Application Case

1. Expand module through the host PLC parallel port.....	9
1.1. Module power supply.....	9
1.2. The analog need't be written any conversion program, read the analog register value directly.....	9
1.3. Programming skills	10
1.4. Display analog value on HMI.....	10
1.5. When the engineering value is not used, the default code value is 0 ~ 32000.....	11
1.6. Module CR code application example: Read the module channel disconnection alarm.....	11

Analog Module User Manual

1. Product Model List and Dimension

Model	Power (24V)	Dimension
AE-4AD	DC24V~0.1A MAX	25*95*65 mm
AE-4DA	DC24V~0.1A MAX	
AE-2AD2DA	DC24V~0.1A MAX	
AE-8AD	DC24V~0.15A MAX	
AE-8DA	DC24V~0.15A MAX	
AE-4AD4DA	DC24V~0.15A MAX	

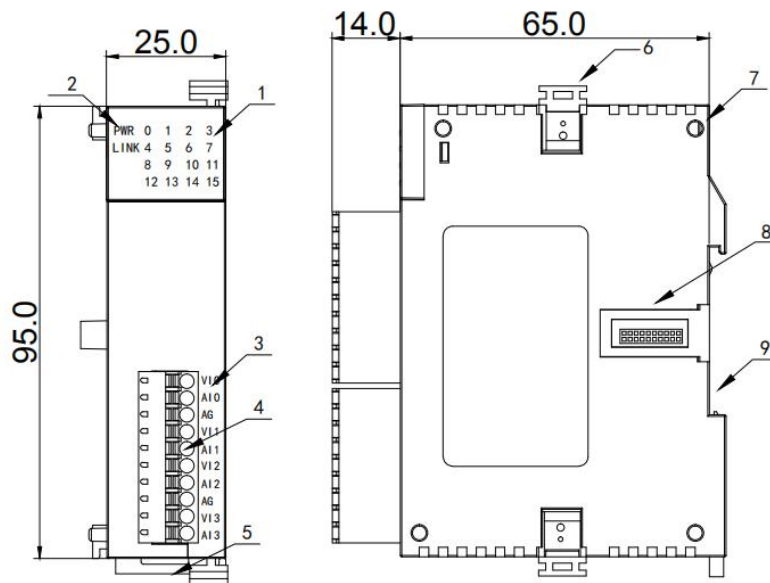

1. Indicator	8. Module extension port
2. PWR power indicator, LINK module communication indicator	9. 35mm DIN guide rail track
3. Terminal definition	
4. Removable terminal	
5. Guide rail buckle	
6. Module lock buckle	
7. Module positioning hole	

2. Indicator Description

- ① **PWR**: power indicator. green, constant light -Power normal; Not light - Power abnormal.
 ② **LINK**: multi-status indicator . three colors (Red. Yellow. Green), as follow:

Reference processing mode	Module bus state	LINK indicator state
Normal	No communication of module	No light
	MPU has identified the module but no communication	Constant light in green
	Serial or parallel port in communication	Green jitter: indicator on 30ms and off 30ms
Parallel power supply not enough, must connect to external power supply	Without serial or parallel port in communication	Yellow flicker: indicator on 0.5s and off 0.5s
	With serial or parallel port in communication	Yellow is darkened and jitter alternately: indicator off 0.5s and jitter 0.5s
Firmware upgrade failed, reupgrade the module firmware	Without serial or parallel port in communication	Red flicker: indicator on 0.5s and off 0.5s
	With serial or parallel port in communication	Red is darkened and jitter alternately: indicator off 0.5s and jitter 0.5s
Hardware failure and maintenance	Without serial or parallel port in communication	Constant light in red

3. Power Supply Specification

Item	DC Power Supply
Power supply voltage	24VDC -15%~+20%
Power supply frequency	—
Instantaneous surge	MAX 20A 1.5ms @24VDC
Power loss time	10ms or less
Fuse	0.3A, 250V
24V Output voltage (for input and expansion)	None
Isolation Type	No Electrical isolation
Power Protection	DC input power polarity reverse, over voltage protection

4. Environmental Specifications for Product

Item	Environment Specification
Temperature/Humidity	Operating temperature:0~+55℃ Storage temperature:-25~+70℃ Humidity: 5~95%RH, No condensation
Vibration Resistance	10~57 HZ, amplitude=0.075mm, 57HZ~150HZ acceleration=1G, 10 times each for X-axis, Y-axis and Z-axis
Impact Resistance	15G, duration=11ms, 6 times each for X-axis, Y-axis and Z-axis
Interference Immunity	DC EFT:±2500V Surge:±1000V
Over Voltage Resistance	1500VAC/1min between AC terminal and PE terminal, 500VAC/1min between DC terminal and PE terminal
Insulation Impedance	Between AC terminal and PE terminal @500VDC,≥5MΩ ,all input/output points to PE terminal @500VDC
Operating environment	Avoid dust, moisture, corrosion, electric shock and external shocks

5. Analog Input (AI) Specification


Item	Voltage input				Current input
Input range	-10V~+10V	0V~+10V	0V~+5V	1V~+5V	0~20mA 4~20mA
Resolution	5mV	2.5mV	1.25mV	1.25mV	5μA
Input impedance	6MΩ				250Ω
Maximum input range	± 13V				±30mA
Input indication	LED light ON means normal ,OFF means external disconnect				
Response time	5ms/4 Channel				
Digital input range	12 bits,Code range:0~32000(H series module 16 bits A/D convert)				
Precision	0.2% F.S				
Power supply	MPU use internal power supply, extend module use external power supply 24VDC ±10% 5VA				
Isolation mode	Photoelectric isolation,Non-isolation between Channels, between analog and digital is optoelectronic isolation				
Power consumption	24VDC ±20%,100mA(maximum)				

6. Analog Output (AQ) Specification

Item	Voltage output				Current output	
Output range	-10V~+10V	0V~ +10V	0V~+5V	1V~+5V	0~20mA	4~20mA
Resolution	5mV	2.5mV	1.25mV	1.25mV	5uA	5uA
Output load impedance	1KΩ@10V		≥500Ω@10V		≤500Ω	
Output indication	LED ON means normal					
Drive capability	10mA					
Response time	3ms					
Digital output range	12 bits,Code range:0~32000(H series module 16 bits D/A convert)					
Precision	0.2% F.S					
Power supply	MPU use internal power supply, expansion modules use external power supply 24VDC ±10% 5VA					
Isolation mode	Photoelectric isolation,Non-isolation between Channels ,between analog and digital is optoelectronic isolation					

Power consumption	24VDC $\pm 20\%$, 100mA(maximum)
-------------------	-----------------------------------


7. Analog Input (AI) Wiring Diagram

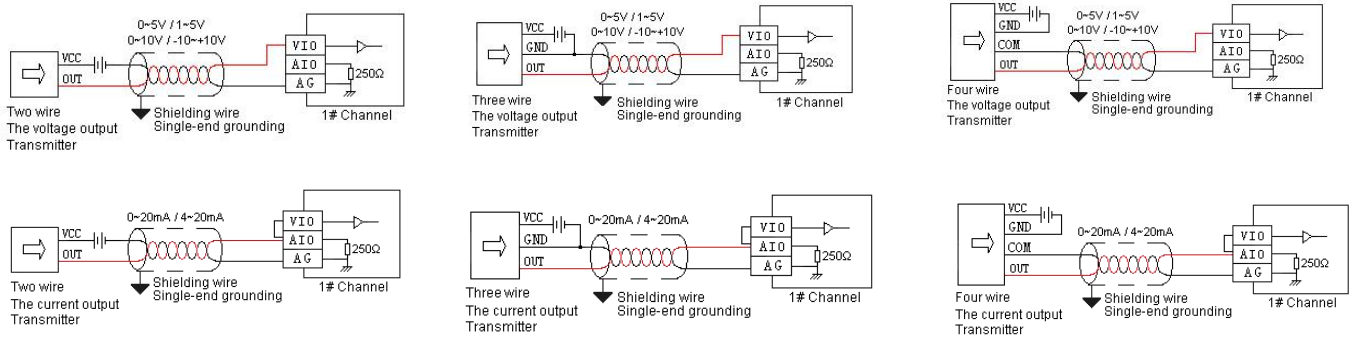

8. Analog Output (AQ) Wiring Diagram



9. Terminal Diagram

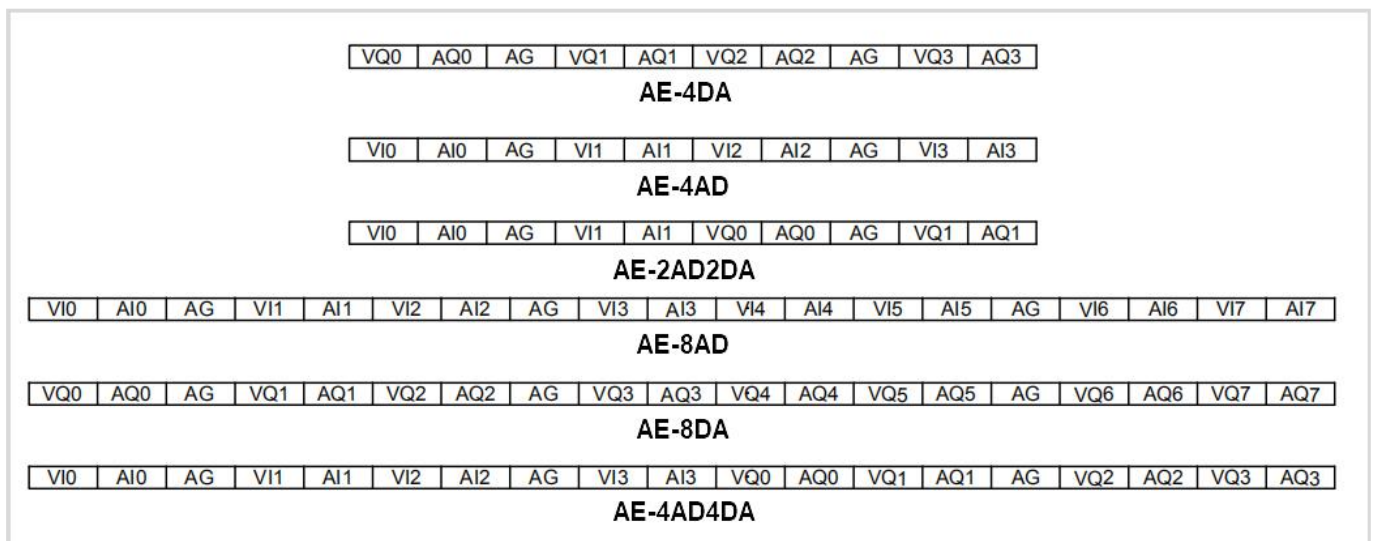

10. Module Parameter Table

(CR code is corresponding to the Modbus register address)

4-channel analog module parameter table

Note: CR code is corresponding to the Modbus register address, the ray parts are read-only ,the white parts are readable and writable.

CR code	Function Description		
	AE-4AD	AE-4DA	AE-2AD2DA
00H	Low byte for module code, and high byte for module version number.		
01H	Communication address		
02H	Communication protocol: The low 4-bit of the low byte: 0 - N,8,2 For RTU, 1 - E,8,1 For RTU, 2 - O,8,1 For RTU, 3 - N,7,2 For		

CR code	Function Description		
	AE-4AD	AE-4DA	AE-2AD2DA
	ASCII, 4 - E,7,1 For ASCII, 5 - O,7,1 For ASCII, 6 - N,8, 1 For RTU The high 4-bit of the low byte: 0 - 2400, 1 - 4800, 2 - 9600, 3 - 19200, 4 - 38400, 5 - 57600, 6 - 115200		
03H~06H	Module name		
07H~08H	Default IP address: 192.168.1.111		
09~0AH	Reserve		
0BH	High byte subnet mask (b3~b0, 1 indicates 255, 0 indicates 0, for example subnet mask 255.255.255.0, b3~b0=1110), low byte reserved		
0CH~0EH	Reserve		
0FH	Error code: 0-Normal, 1-Illegal firmware identity, 2-Incomplete firmware, 3-System data access exception, 4-No external 24V power supply		
10H	channel 1 input value	channel 1 output value	input channel 1 input value
11H	channel 2 input value	channel 2 output value	input channel 2 input value
12H	channel 3 input value	channel 3 output value	input channel 1 signal type, note 2
13H	channel 4 input value	channel 4 output value	input channel 2 signal type, note 2
14H	channel 1 signal type, note 2	channel 1 signal type, note 2	Use the engineering value mark, note 6
15H	channel 2 signal type, note 2	channel 2 signal type, note 2	input channel 1 engineering lower limiting value
16H	channel 3 signal type, note 2	channel 3 signal type, note 2	input channel 2 engineering lower limiting value
17H	channel 4 signal type, note 2	channel 4 signal type, note 2	input channel 1 engineering upper limiting value
18H	Use the engineering value mark, note 6	Use the engineering value mark, note 6	input channel 2 engineering upper limiting value
19H	channel 1 engineering lower limiting value	channel 1 engineering lower limiting value	input channel 1 sampling frequency, note 1
1AH	channel 2 engineering lower limiting value	channel 2 engineering lower limiting value	input channel 2 sampling frequency, note 1
1BH	channel 3 engineering lower limiting value	channel 3 engineering lower limiting value	input channel 1 zero point correction value
1CH	channel 4 engineering lower limiting value	channel 4 engineering lower limiting value	input channel 2 zero point correction value
1DH	channel 1 engineering upper limiting value	channel 1 engineering upper limiting value	Channel 1~2 input disconnection alarm, note 5
1EH	channel 2 engineering upper limiting value	channel 2 engineering upper limiting value	output channel 1 output value
1FH	channel 3 engineering upper limiting value	channel 3 engineering upper limiting value	output channel 2 output value
20H	channel 4 engineering upper limiting value	channel 4 engineering upper limiting value	output channel 1 signal type, note 2
21H	channel 1 sampling frequency, note 1	power-off output mark, note 8	output channel 2 signal type, note 2
22H	channel 2 sampling frequency, note 1	channel 1 power-off output value	Use the engineering value mark, note 6
23H	channel 3 sampling frequency, note 1	channel 2 power-off output value	output channel 1 engineering lower limiting value
24H	Channel 4 sampling frequency, note 1	channel 3 power-off output value	output channel 2 engineering lower limiting value
25H	channel 1 zero point correction value	channel 4 power-off output value	output channel 1 engineering upper limiting value
26H	channel 2 zero point correction value	Channel indicator status, note 7	output channel 2 engineering upper limiting value
27H	channel 3 zero point correction value	Reserve	power-off output mark, note 8
28H	channel 4 zero point correction value		output channel 1 power-off output value
29H	Channel 1~4 input disconnection alarm, note 5		output channel 2 power-off output value
2AH	Reserve		output channel indicator, note 7
2BH~2FH			Reserve

8 channel analog module parameter table

Note: CR code is corresponding to the Modbus register address, the gray parts are read-only, the white parts are readable and writable.

CR code	Function description		
	AE-8AD	AE-8DA	AE-4AD4DA
00H	Low byte for module code, and high byte for module version number.		
01H	Communication address		
02H	Communication protocol: The low 4-bit of the low byte: 0 - N,8,2 For RTU, 1 - E,8,1 For RTU, 2 - O,8,1 For RTU, 3 - N,7,2 For ASCII, 4 - E,7,1 For ASCII, 5 - O,7,1 For ASCII, 6 - N,8, 1 For RTU The high 4-bit of the low byte: 0 - 2400, 1 - 4800, 2 - 9600, 3 - 19200, 4 - 38400, 5 - 57600, 6 - 115200		

CR code	Function description		
	AE-8AD	AE-8DA	AE-4AD4DA
03H~06H	Module name		
07H~08H	Default IP address: 192.168.1.111		
09~0AH	Reserve		
0BH	High byte subnet mask (b3~b0, 1 indicates 255, 0 indicates 0, for example subnet mask 255.255.255.0, b3~b0=1110), low byte reserved		
0CH~0EH	Reserve		
0FH	Error code: 0-Normal, 1-Illegal firmware identity, 2-Incomplete firmware, 3-System data access exception, 4-No external 24V power supply		
10H	channel 1 input value	channel 1 output value	input channel 1 input value
11H	channel 2 input value	channel 2 output value	input channel 2 input value
12H	channel 3 input value	channel 3 output value	input channel 3 input value
13H	channel 4 input value	channel 4 output value	input channel 4 input value
14H	channel 5 input value	channel 5 output value	input channel 1 signal type, note 2
15H	channel 6 input value	channel 6 output value	input channel 2 signal type, note 2
16H	channel 7 input value	channel 7 output value	input channel 3 signal type, note 2
17H	channel 8 input value	channel 8 output value	input channel 4 signal type, note 2
18H	channel 1 signal type, note 2	channel 1 signal type, note 2	Use the engineering value mark, note 6
19H	channel 2 signal type, note 2	channel 2 signal type, note 2	input channel 1 engineering lower limiting value
1AH	channel 3 signal type, note 2	channel 3 signal type, note 2	input channel 2 engineering lower limiting value
1BH	channel 4 signal type, note 2	channel 4 signal type, note 2	input channel 3 engineering lower limiting value
1CH	channel 5 signal type, note 2	channel 5 signal type, note 2	input channel 4 engineering lower limiting value
1DH	channel 6 signal type, note 2	channel 6 signal type, note 2	input channel 1 engineering upper limiting value
1EH	channel 7 signal type, note 2	channel 7 signal type, note 2	input channel 2 engineering upper limiting value
1FH	channel 8 signal type, note 2	channel 8 signal type, note 2	input channel 3 engineering upper limiting value
20H	Use the engineering value mark, note 6	Use the engineering value mark, note 6	input channel 4 engineering upper limiting value
21H	channel 1 engineering lower limiting value	channel 1 engineering lower limiting value	input channel 1 sampling frequency, note 1
22H	channel 2 engineering lower limiting value	channel 2 engineering lower limiting value	input channel 2 sampling frequency, note 1
23H	channel 3 engineering lower limiting value	channel 3 engineering lower limiting value	input channel 3 sampling frequency, note 1
24H	channel 4 engineering lower limiting value	channel 4 engineering lower limiting value	input channel 4 sampling frequency, note 1
25H	channel 5 engineering lower limiting value	channel 5 engineering lower limiting value	input channel 1 zero point correction value
26H	channel 6 engineering lower limiting value	channel 6 engineering lower limiting value	input channel 2 zero point correction value
27H	channel 7 engineering lower limiting value	channel 7 engineering lower limiting value	input channel 3 zero point correction value
28H	channel 8 engineering lower limiting value	channel 8 engineering lower limiting value	input channel 4 zero point correction value
29H	channel 1 engineering upper limiting value	channel 1 engineering upper limiting value	Channel 1~4 input disconnection alarm, note 5
2AH	channel 2 engineering upper limiting value	channel 2 engineering upper limiting value	output channel 1 output value
2BH	channel 3 engineering upper limiting value	channel 3 engineering upper limiting value	output channel 2 output value
2CH	channel 4 engineering upper limiting value	channel 4 engineering upper limiting value	output channel 3 output value
2DH	channel 5 engineering upper limiting value	channel 5 engineering upper limiting value	output channel 4 output value
2EH	channel 6 engineering upper limiting value	channel 6 engineering upper limiting value	output channel 1 signal type, note 2
2FH	channel 7 engineering upper limiting value	channel 7 engineering upper limiting value	output channel 2 signal type, note 2
30H	channel 8 engineering upper limiting value	channel 8 engineering upper limiting value	output channel 3 signal type, note 2
31H	channel 1 sampling frequency, note 1	power-off output mark	output channel 4 signal type, note 2
32H	channel 2 sampling frequency, note 1	channel 1 power-off output value	Use the engineering value mark, note 6
33H	channel 3 sampling frequency, note 1	channel 2 power-off output value	output channel 1 engineering lower limiting value
34H	channel 4 sampling frequency, note 1	channel 3 power-off output value	output channel 2 engineering lower limiting value

CR code	Function description		
	AE-8AD	AE-8DA	AE-4AD4DA
35H	channel 5 sampling frequency, note 1	channel 4 power-off output value	output channel 3 engineering lower limiting value
36H	channel 6 sampling frequency, note 1	channel 5 power-off output value	output channel 4 engineering lower limiting value
37H	channel 7 sampling frequency, note 1	channel 6 power-off output value	output channel 1 engineering upper limiting value
38H	channel 8 sampling frequency, note 1	channel 7 power-off output value	output channel 2 engineering upper limiting value
39H	channel 1 zero point correction value	channel 8 power-off output value	output channel 3 engineering upper limiting value
3AH	channel 2 zero point correction value	Channel indicator status	output channel 4 engineering upper limiting value
3BH	channel 3 zero point correction value	Reserve	power-off output mark
3CH	channel 4 zero point correction value		output channel 1 power-off output value
3DH	channel 5 zero point correction value		output channel 2 power-off output value
3EH	channel 6 zero point correction value		output channel 3 power-off output value
3FH	channel 7 zero point correction value		output channel 4 power-off output value
40H	channel 8 zero point correction value		output channel indicator
41H	Channel 1~8 input disconnection alarm, note 5		Reserve
42H~4FH	Reserve		

Note:

- Sampling frequency: 0 - 2 times, 1 - 4 times, 2 - 8 times, 3 - 16 times, 4 - 32 times, 5 - 64 times, 6 - 128 times, 7 - 256 times
- Signal type: 0 - [4,20]mA, 1 - [0,20]mA, 2 - [1,5]V, 3 - [0,5]V, 4 - [0,10]V, 5 - [-10,10]V
- Disconnection alarm: Each bit indicates 1 channel, 0-normal, 1-disconnection
- Use the engineering value mark: Each bit indicates 1 channel, 0-No, 1-Yes
- Channel indicator status: Each bit indicates 1 channel, 0-off, 1-on
- Power-off output mark: Each bit indicates 1 channel, 0-No, 1-Yes

11. Mounting and installation


The PLC should be secured to an enclosed cabinet while mounting. For heat dissipation, make sure to provide a minimum clearance of 50mm between the unit and all sides of the cabinet. (See the figure.)

Rail Mounting: Use standard 35 mm rail.

Connecting Extended Module

Join lower right parallel interface of Last module (Host or Extension Module) to the lower right of the parallel interface of next module, then tight with two buckles on top and bottom.

The interface of the right side module is left for extension interface for next extension module.

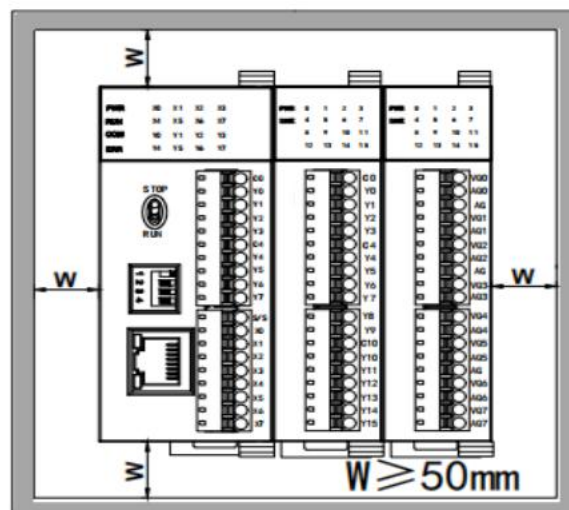

Analog Module Application Case

1. Expand module through the host PLC parallel port

1.1. Module power supply

- ① Analog module can be the expansion module for A series PLC; When the module is directly connect to the host PLC, no need to take external power supply, the module is powered by host PLC.

1.2. The analog need't be written any conversion program, read the analog register value directly.

For example, the host PLC HCG-8X8Y-R, respectively, is expanded with three modules of AE-16X, AE-8X8Y-R, AE-4AD and AE-4DA from left to right, assuming the scene:

- Analog module AE-4AD input channel 1, signal type is 4-20mA, used to measure the pressure, the pressure range of 0.0~3.0Mpa;
- Analog module AE-4DA input channel 1, signal type is 0-10V, used to control the inverter frequency of 0.0~50.0Hz;


First enter the PLC programming software menu bar - view - hardware configuration, in accordance with the external order of actual modules to add the module models, after added, the analog address will be automatically arranged, as shown below:

Index	Module type	X Component	Y Component	AI Component	AQ Component	Other	Description
0	HCG-8X8Y-R	X0 - X7	Y0 - Y7			COM1-2 HSC0-1	CPU module 8*DI 8*DO relay DC24V power
1	AE-16X	X8 - X23					Digital input module 16*DI
2	AE-8X8Y-R	X24 - X31	Y8 - Y15				Digital I/O module 8*DI 8*DO relay
3	AE-4AD			AI0 - AI3			Analog input module 4*AI analog input
4	AE-4DA				AQ0 - AQ3		Analog output module 4*AO analog output

Haiwell analog module need't be written any conversion program, as for above pressure measurement, we only need to check the use of engineering value, set the lower limit value of 0 corresponding 0.0Mpa, set the upper limit value of 3000 indicating 3.000Mpa, the upper limit value 3000 hidden three decimal places can achieve magnification times and improve accuracy. Then we read the value of the analog input register AI0, if AI0 = 1234, then the actual value is 1.234Mpa.

The screenshot shows the configuration window for the AE-4AD module. It includes a 'Help' button and a 'Default' button. Under the 'Analog inputs' section, there are four rows for AI0, AI1, AI2, and AI3. Each row has a 'Signal type' dropdown (all set to [4,20]mA), a 'Use engineering units' checkbox (checked for AI0), and two numeric input fields for 'Lower limit' and 'Upper limit'. For AI0, the lower limit is 0 and the upper limit is 3000. To the right of these are 'Sample times' and 'Zero point' settings, all set to 64 and 0 respectively.

Similarly, for the analog output, check the use of engineering value, set the lower limit value of 0 indicating 0.0Hz, set the upper limit value of 500 indicating 50.0Hz, if you want the inverter frequency output is 25.6Hz, as long as force the AQ0 value as 256 or through other logic instructions to output the AQ0 value of 256. As shown below:

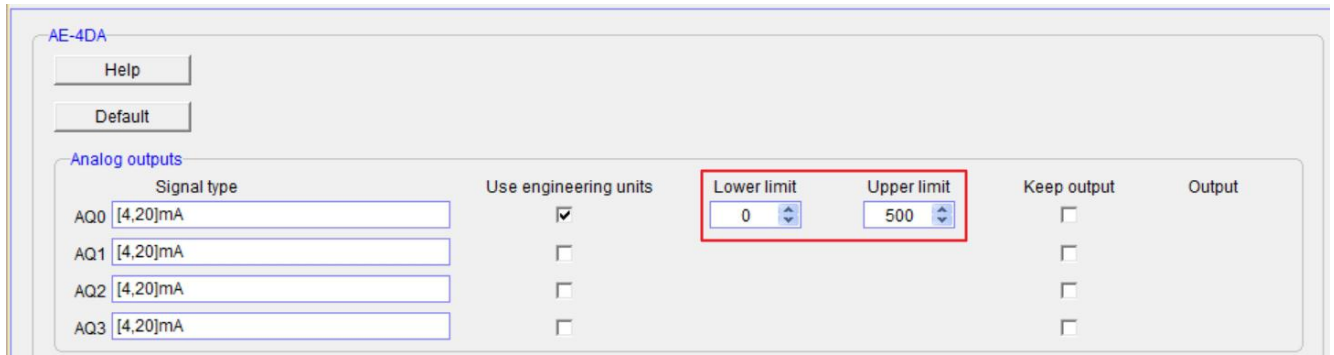

1.3. Programming skills


If you want to write the alarm program that pressure exceeds the setting value, for example, when the pressure is more than 1.25Mpa, it will alarm, the program of PLC can be written as follows:

//Network 1 When the liquid level is higher than the setting value 1.25Mpa, the alarm output



1.4. Display analog value on HMI

If the HMI, text and other PC software want to display the current pressure, only need to set three decimal digits on the numerical display primitive, then the read value will be automatically reduced 1000 times in the configuration, that is the actual temperature value, for example, you can set 3 on decimal digits of HMI settings.

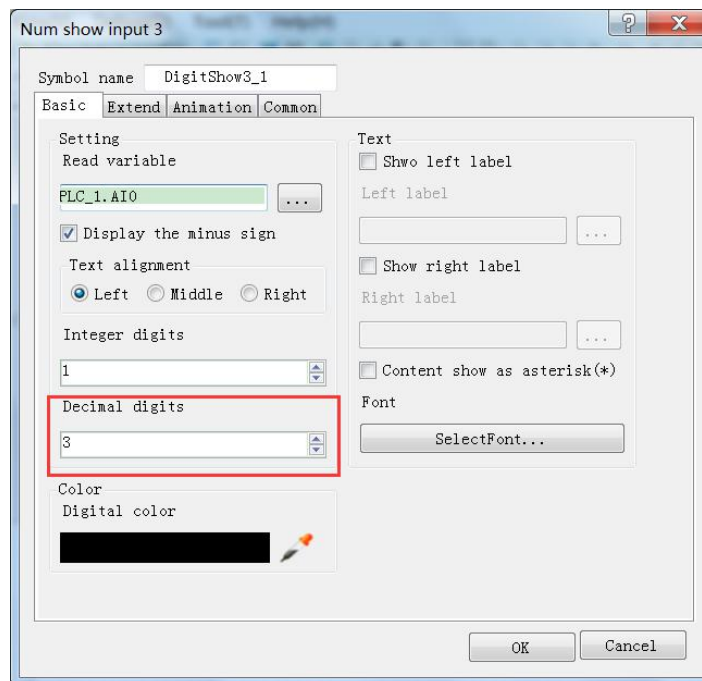

So that when the PLC read AI0 value, AI0=1234, that is the actual value of 1.234Mpa, there is no need to have data processing in PLC and configuration, only set the 3 decimal places on the numerical display primitive, then it will be automatically reduced by 1000 times, displaying value of 1.234, that is the actual value of 1.234Mpa.

1.5. When the engineering value is not used, the default code value is 0 ~ 32000

When using the engineering value, the linear transformation is specified by the lower limit and the upper limit value, and the program is automatically transformed. When the engineering value is not used, all types are unified to correspond with 0 ~ 32000 code value. The same case of pressure measurement, this time can according to the linear transformation formula: $\text{Out} = (\text{In} - \text{InDw}) * (\text{OutUp} - \text{OutDw}) / (\text{InUp} - \text{InDw}) + \text{OutDw}$ to write the conversion program, or use the SC linear transformation instructions to calculate directly.

HNC analog used easily, it is recommended to check the use of engineering value, so that the analog will be very convenient without writing any program.

1.6. Module CR code application example: Read the module channel disconnection alarm

In this example, in order to read the external sensor disconnection information of AE-4AD4DA module, the disconnection alarm data of AE-4AD4DA module input channel 1-4 is stored in CR29, that is, 29H (hexadecimal), decimal 41. (More CR contents can be found in the software online help - hardware manual - expansion module parameters within the corresponding model). This program is as follows:

- **Slot:** Position number, AE-4AD4DA is the third module, so fill in 3;
- **CR:** Module disconnection alarm CR41, that is, 29H (hexadecimal) = 41 (decimal), it can be directly input 41 or 0x29 into the instruction CR terminal;
- **N:** Number for readings, 1 register for 16 bits, low 4 bits corresponding channel 1-4, disconnection for 1 (ON), normal for 0 (OFF).

